

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM


HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 460 ± 30 g (16.23 ± 1.06 oz.)

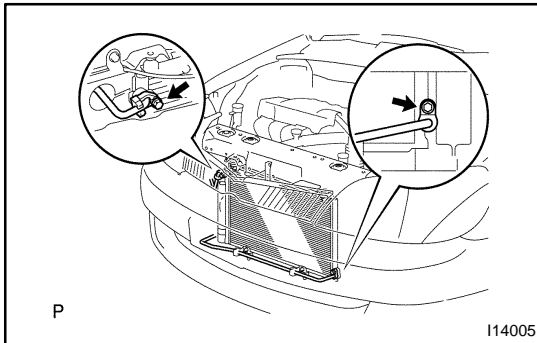

2. DISCONNECT DISCHARGE HOSE AND LIQUID TUBE

Remove the 2 bolts and disconnect the hose and tube.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)


NOTICE:

Cap open the fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of installation, please refer to the following item.


Lubricate 2 new O-rings with compressor oil and install them to the tubes.

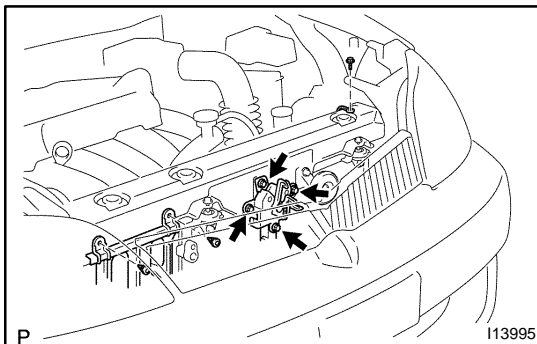

3. REMOVE RADIATOR UPPER SUPPORT

- (a) Remove the 3 hood lock set bolts.
- (b) Remove the center brace set bolt.
- (c) Remove the 2 radiator cover set clips.
- (d) Disconnect the connector from the hone.
- (e) Remove the earth wire set bolt.

- (f) Remove the 6 bolts and radiator upper support.

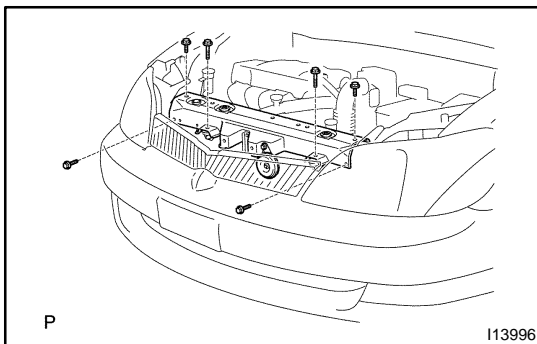

4. REMOVE CONDENSER

Pull out the condenser upward.

HINT:

At the time of installation, please refer to the following item.

If condenser is replaced, add compressor oil to the compressor.

Add 40 cc (1.4 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent

