



INSTALLATION

INSTALL DRIVE BELT

- (a) Install the drive belt.
- (b) Apply drive belt tension by turning adjusting bolt.

Drive belt tension:

New belt: 7.0 - 8.5 mm (0.28 - 0.33 in.)

Used belt: 11.0 - 13.0 mm (0.43 - 0.51 in.)

- (c) Tighten the pivot bolt.

Torque: 54 N·m (540 kgf·cm, 39 ft·lbf)