



HEATER CONTROL ASSEMBLY ON-VEHICLE INSPECTION

AC295-03

INSPECT HEATER CONTROL DIALS OPERATION

Turn the control lever and dials left and right then check that click sound can be heard and recoil is felt.

If click sound can not be heard or recoil is felt, adjust the control cable or check control cable and heater control assembly.