


HEATER MAIN RELAY INSPECTION

AC230-05

1. REMOVE INSTRUMENT PANEL (See page [BO-76](#))
2. REMOVE HEATER MAIN RELAY FROM INSTRUMENT PANEL J / B

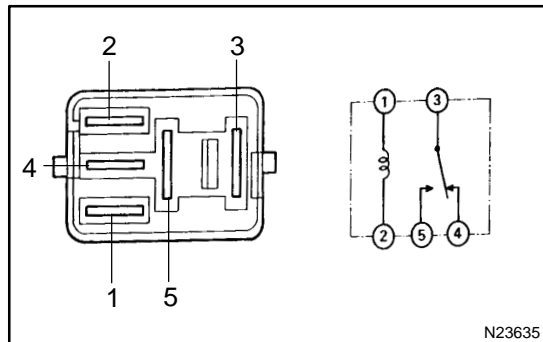

3. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
	3 - 4	
Apply B+ between terminals 1 and 2	3 - 5	Continuity

If continuity is not as specified, replace the relay.

4. INSTALL HEATER MAIN RELAY TO INSTRUMENT PANEL J / B
5. INSTALL INSTRUMENT PANEL (See page [BO-84](#))