


MAGNETIC CLUTCH RELAY INSPECTION

AC28T-03

1. REMOVE MAGNETIC CLUTCH RELAY (Marking: A/C MG) FROM ENGINE ROOM RELAY BLOCK

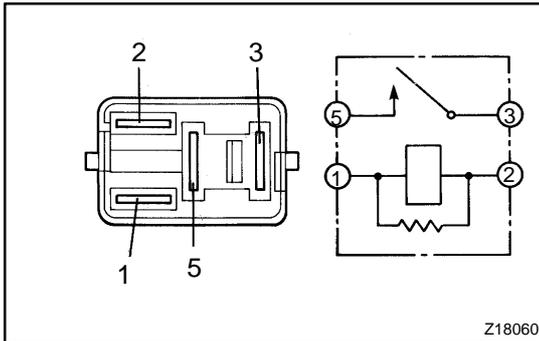

2. INSPECT MAGNETIC CLUTCH RELAY (Marking: A/C MG) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2	3 - 5	Continuity

If continuity is not as specified, replace the relay.

3. INSTALL MAGNETIC CLUTCH RELAY TO ENGINE ROOM RELAY BLOCK