



THERMISTOR INSPECTION

1. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page RS-28)

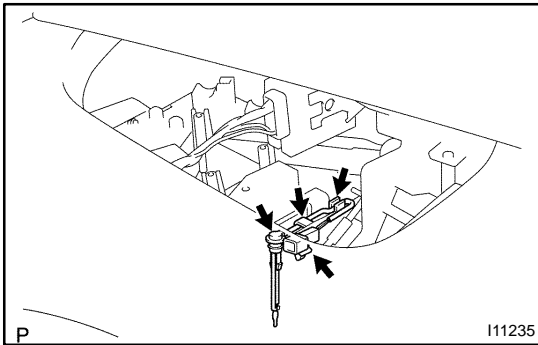


2. REMOVE THERMISTOR

- (a) Disconnect the connector.
- (b) Disconnect the wire harness clamps.
- (c) Using a screwdriver, pull out the thermistor.

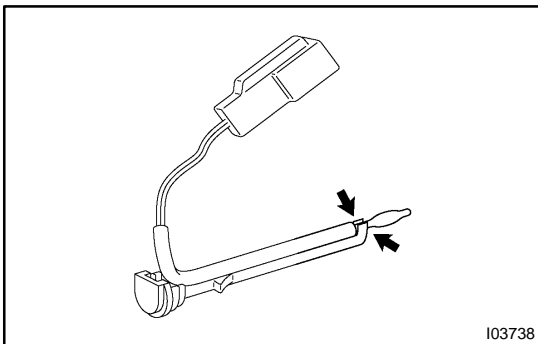


- (d) Release the 2 claws and remove the thermistor from bracket plate.

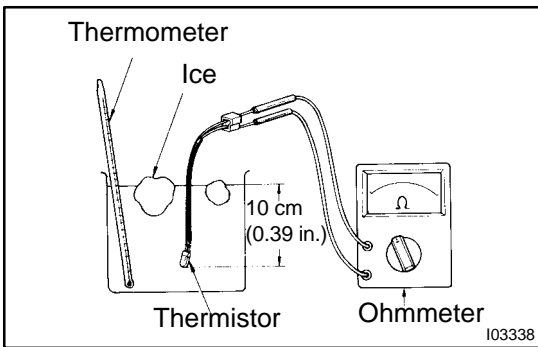

3. INSPECT THERMISTOR RESISTANCE

- (a) Place the thermistor in cold water and while changing the temperature of the water, measure resistance at the connector and at the same time, measure temperature of the water with a thermometer.

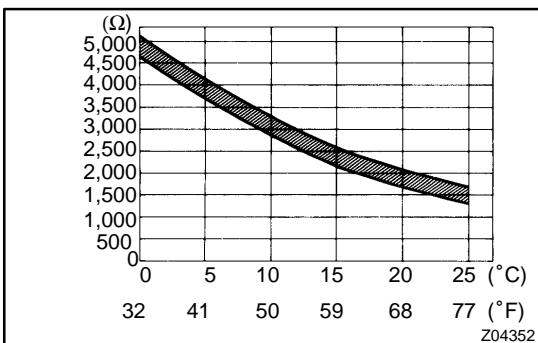

- (b) Compare the 2 readings on the chart. If resistance value is not as specified, replace the thermistor.

4. INSTALL THERMISTOR

- (a) Install the thermistor to A/C unit.
- (b) Connect the wire harness clamps.
- (c) Connect the connector.

5. INSTALL FRONT PASSENGER AIRBAG (See page RS-37)