


WATER TEMPERATURE SWITCH INSPECTION

AC29G-03

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

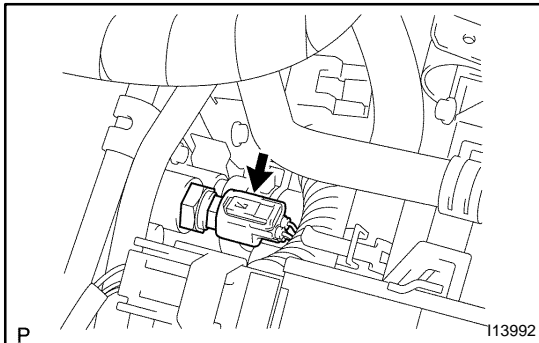

2. REMOVE WATER TEMPERATURE SWITCH

- (a) Disconnect the connector.
- (b) Remove the water temperature switch.

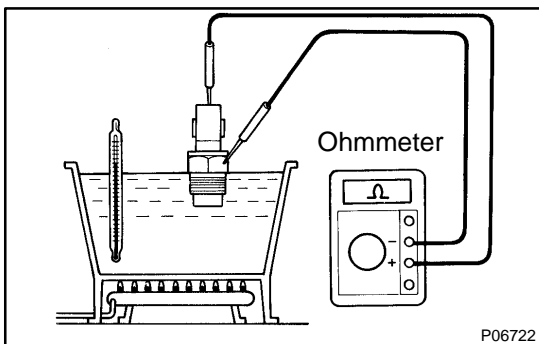

3. INSPECT SWITCH CONTINUITY

- (a) Using an ohmmeter, check that no continuity exists between the terminal and switch body when the coolant temperature is above 83 °C (181 °F).

If continuity exists, replace the switch.

- (b) Using an ohmmeter, check that continuity exists between the terminals when the coolant temperature is below 90 °C (194 °F).

If no continuity exists, replace the switch.

4. INSTALL WATER TEMPERATURE SWITCH

- (a) Install the water temperature switch.

Torque: 34 N·m (350 kgf·cm, 25 ft·lbf)

- (b) Connect the connector.

5. FILL WITH ENGINE COOLANT