 
 



Wire harness side:



Connector "A"



 Connector "B"



Connector "C"

106198

## INSPECTION

### INSPECT RADIO RECEIVER ASSEMBLY CIRCUIT

Disconnect the connectors from the radio receiver assembly, and inspect the connector on the wire harness side.

Tester connection	Condition	Specified condition
B7 - Ground	Constant	Continuity
B3 - Ground	Ignition switch LOCK	No voltage
B3 - Ground	Ignition switch ACC or ON	Battery positive voltage
B4 - Ground	Constant	Battery positive voltage

If the circuit is not as specified, inspect the circuits connected to other parts.