


INSTALLATION

1. INSTALL WASHER NOZZLES

- Install the washer nozzles to the hood.
- Connect the washer hoses.


2. INSTALL OUTER FRONT COWL TOP PANEL

- Install the outer front cowl top panel with 9 bolts.
Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)
- Push in the wiper motor wire harness with the grommet.

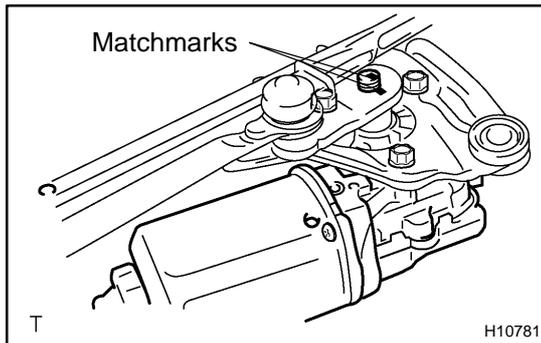

3. INSTALL WIPER MOTOR

- Install the wiper motor with the 3 bolts to the wiper link.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)
- Align the matchmarks on the wiper link and wiper motor, then install the washer and nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

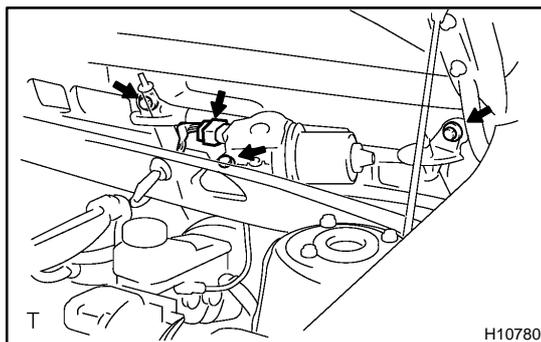

4. INSTALL WIPER MOTOR ASSEMBLY

- Install the wiper motor assembly with 3 bolts.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)
- Connect the connector.


5. INSTALL COWL TOP VENTILATOR LOUVERS

Install the cowl top ventilator louver LH and RH, then install the 7 clips.

6. INSTALL HOOD TO COWL TOP SEAL

7. INSTALL WIPER ARMS

- Operate the wiper motor once and turn the wiper switch OFF.
- Install the wiper arms and tighten nuts by hand.

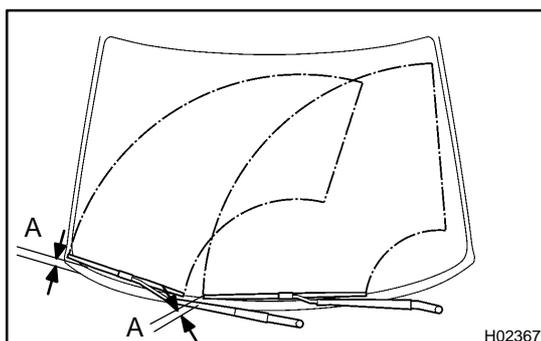

- Adjust the installation position of the wiper arms to the positions as shown in the illustration.
A: Approx. 34 mm (1.34 in.)
- Torque the 2 nuts.
Torque: 20 N·m (205 kgf·cm, 15 ft-lbf)
- Install the 2 wiper arm head caps.