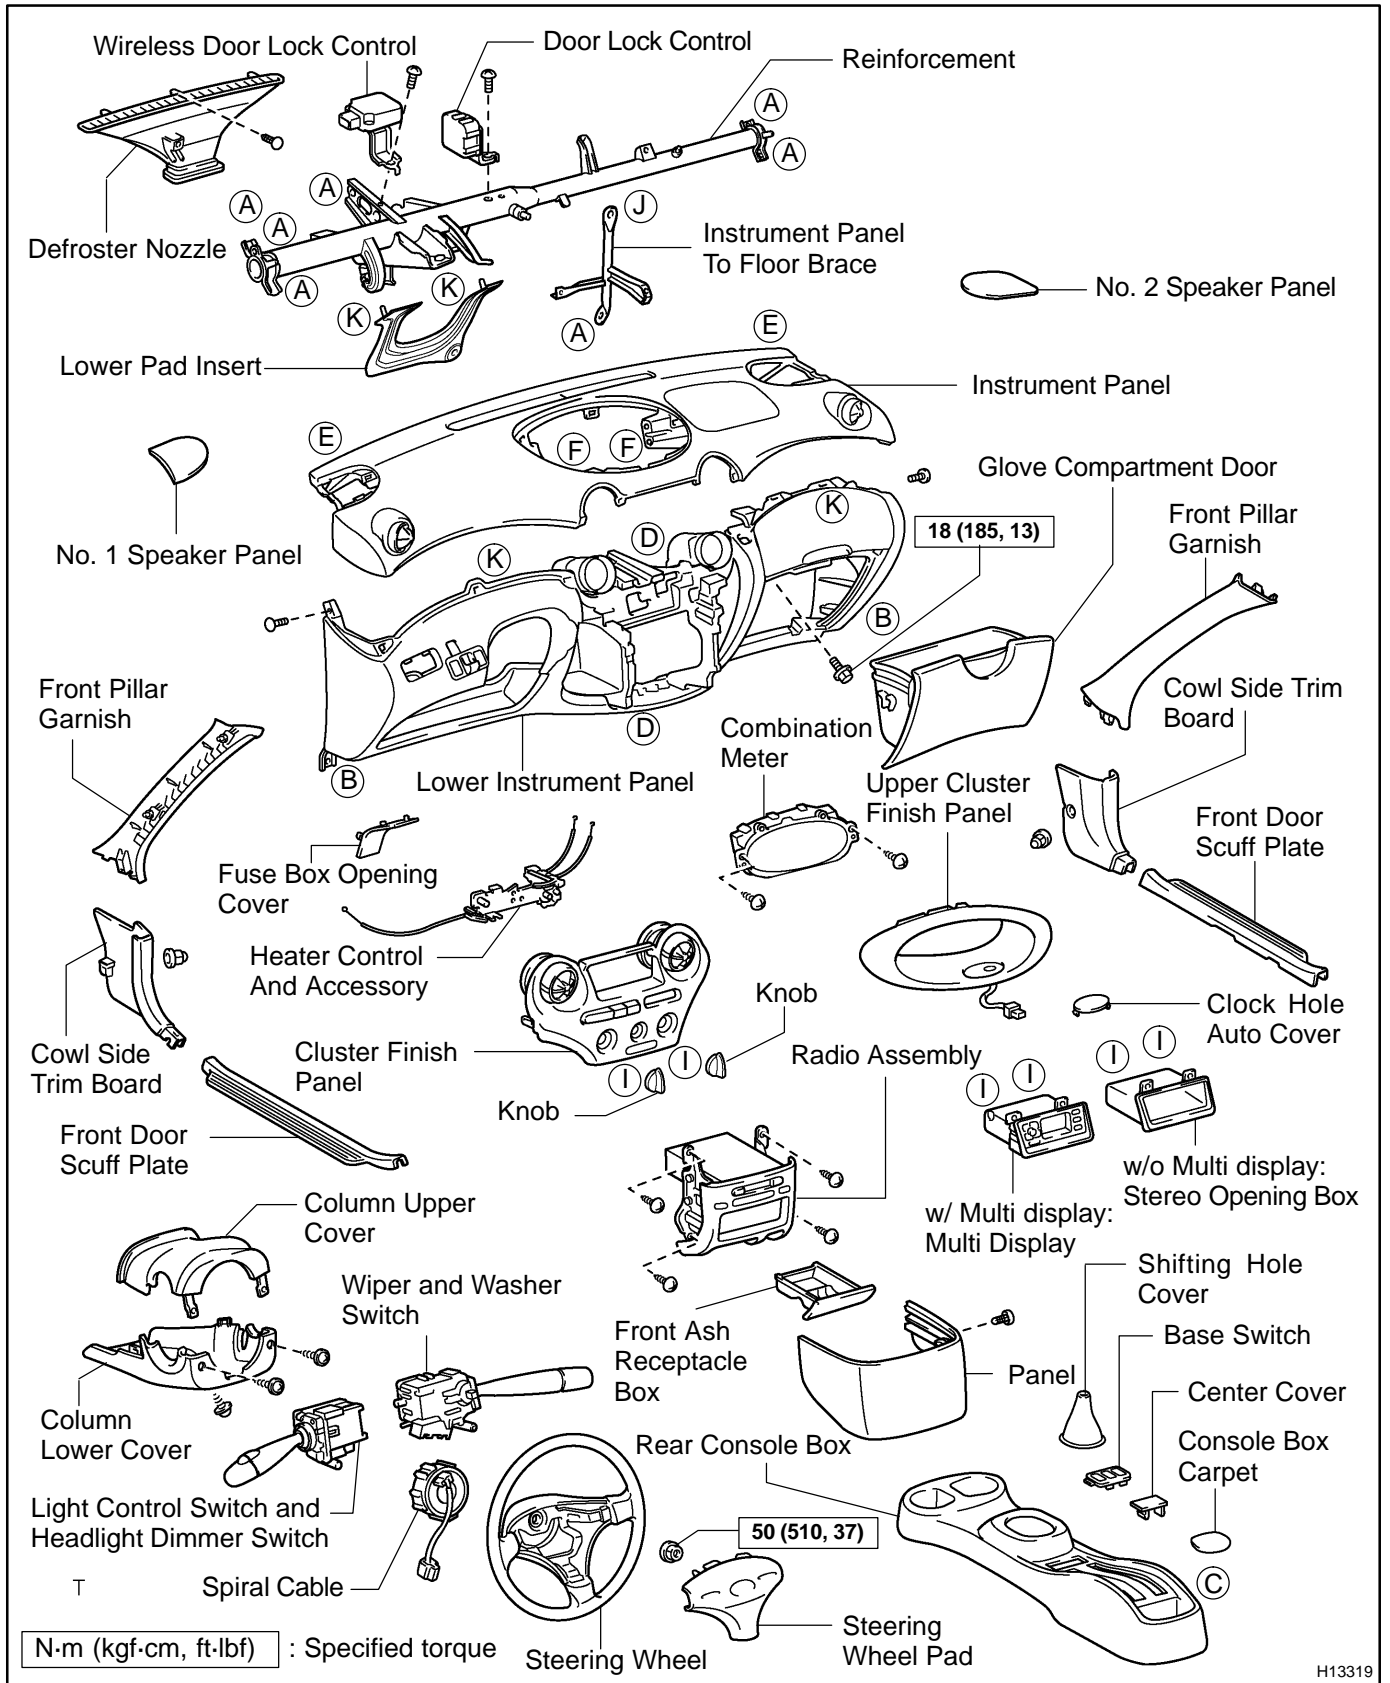
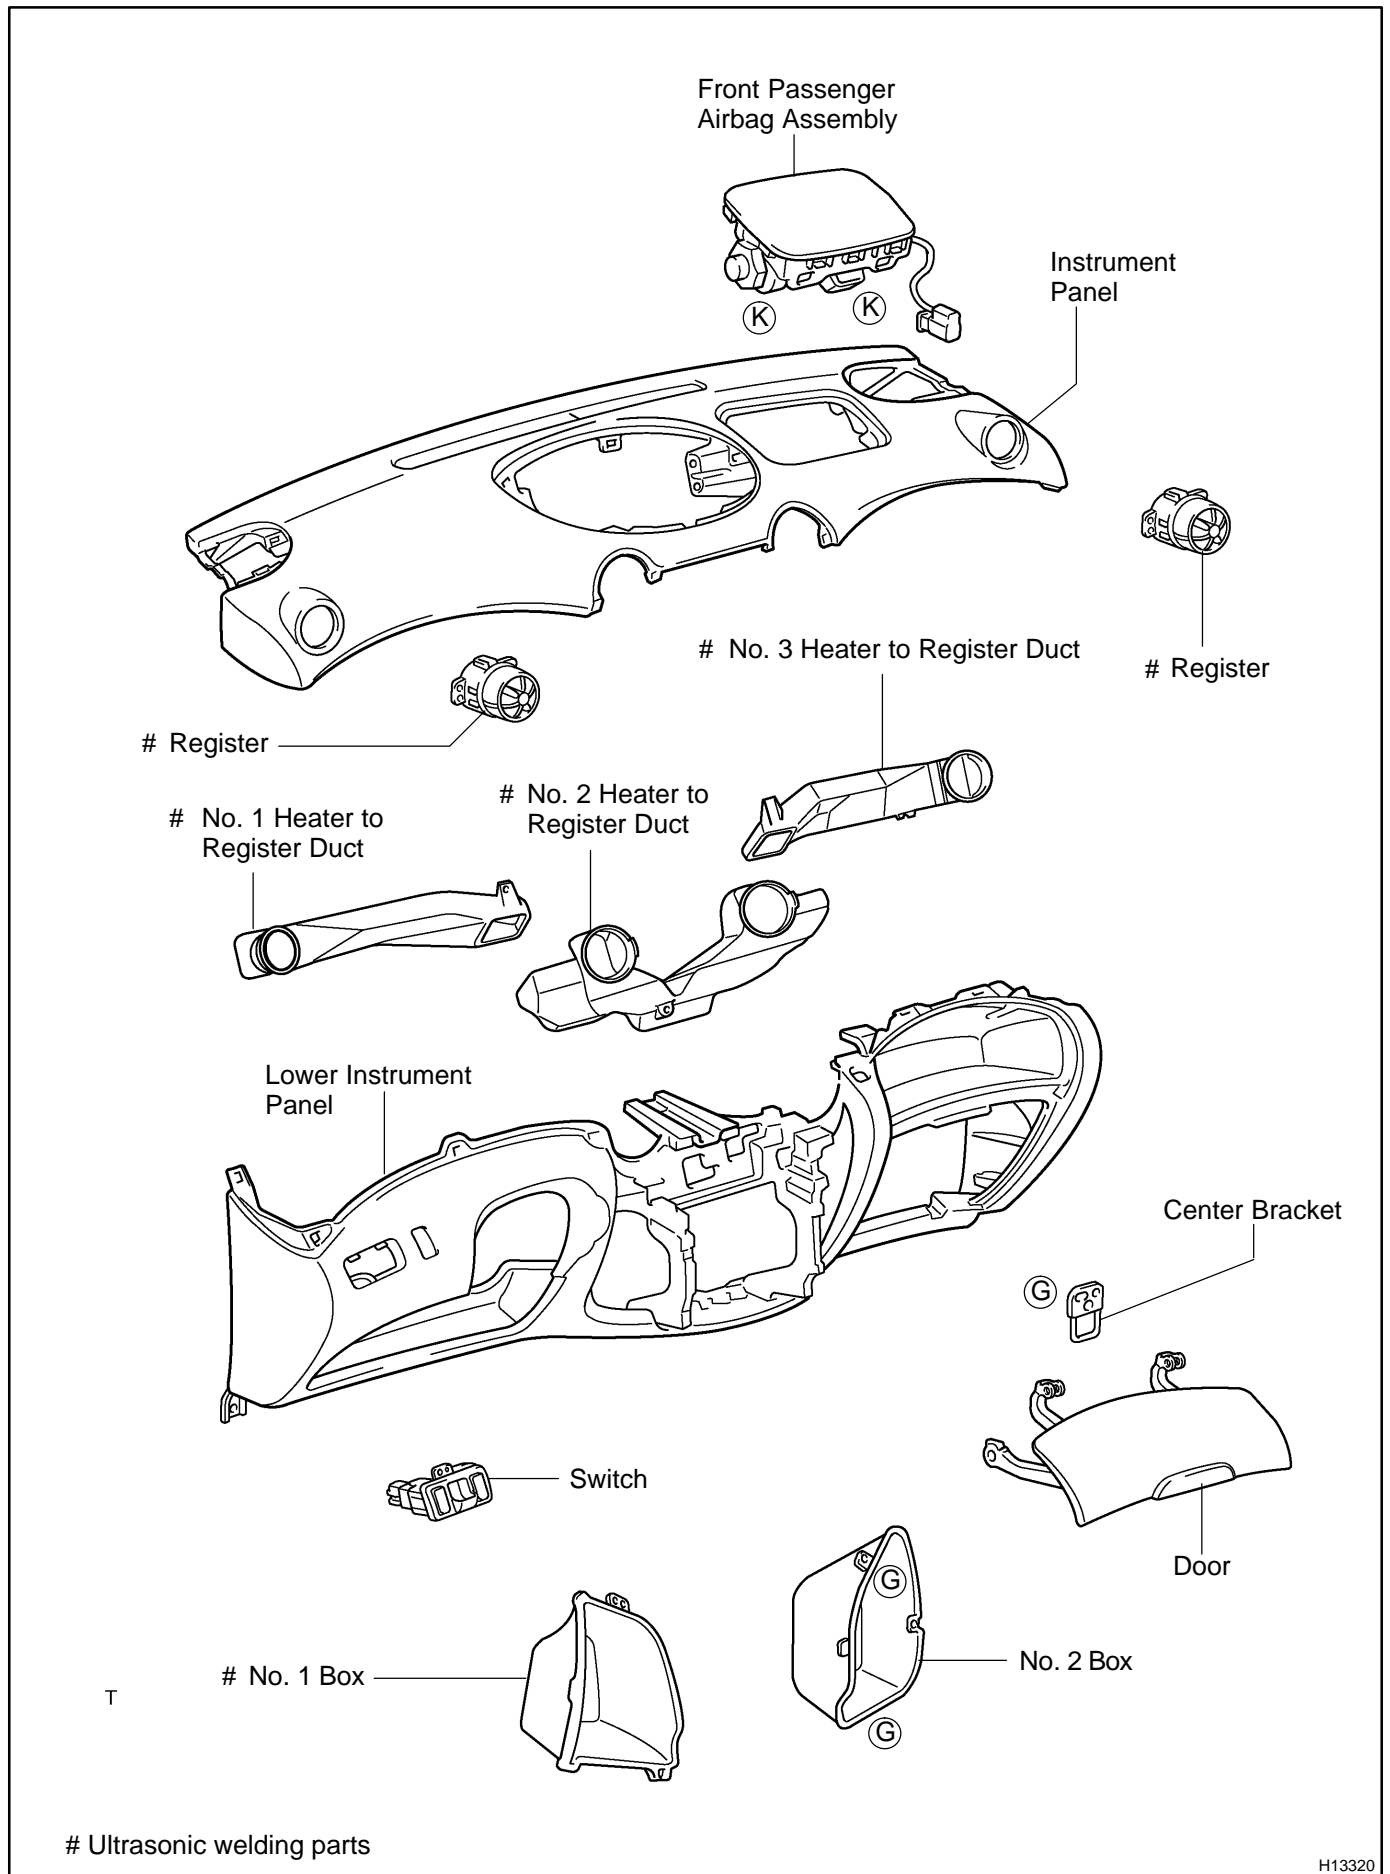


INSTRUMENT PANEL COMPONENTS

BO2H4-04



H13319

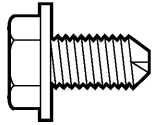
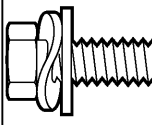
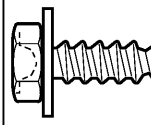
 
 
 



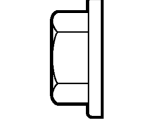
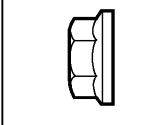


H13320

HINT:

Screw shapes and sizes are indicated in the table below. The codes ("A" - "K") correspond to those indicated on the previous pages.

mm (in.)

	Shape	Size		Shape	Size		Shape	Size
(A)		∅ = 8 (0.31) L = 15 (0.59)	(B)		∅ = 6 (0.24) L = 22 (0.87)	(C)		∅ = 6 (0.24) L = 19 (0.75)
(D)		∅ = 6 (0.24) L = 18 (0.71)	(E)		∅ = 5 (0.20) L = 25 (0.98)	(F)		∅ = 5 (0.20) L = 16 (0.63)
(G)		∅ = 5 (0.20) L = 14 (0.55)	(H)		∅ = 5 (0.20) L = 14 (0.55)	(I)		∅ = 4 (0.16) L = 14 (0.55)
(J)		∅ = 8 (0.31)	(K)		∅ = 6 (0.24)			

T

H11054