


H10388

ADJUSTMENT

1. ADJUST LUGGAGE COMPARTMENT DOOR

- (a) For forward / rearward and left / right adjustments loosen the bolts.
- (b) For vertical adjustment of front end of the door, increase or decrease the number of washers between the hinge and the door.
- (c) Tighten the bolts again.

Torque: 8.3 N·m (85 kgf·cm, 74 in.-lbf)

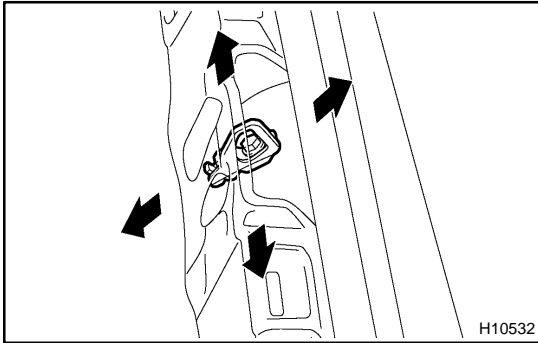

H10532

2. ADJUST DOOR LOCK STRIKER

- (a) Loosen the 2 bolts.
- (b) Using a hammer and brass bar, tap the striker to adjust it.
- (c) Tighten the 2 bolts again.

Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)