

INSTALLATION

1. INSTALL SEATBACK ASSEMBLY

Install the seatback assembly with the 3 bolts.

Torque: 7.9 N·m (81 kgf·cm, 70 in.-lbf)

2. INSTALL SEAT CUSHION ASSEMBLY

- (a) Hook the seat cushion wire to the hook.
- (b) Pull out the rear seat inner belts through the seat cushion assembly.
- (c) Push the front portion of the seat cushion assembly to install it.

HINT:

Confirm that the seat cushion assembly is installed firmly.