

REMOVAL

1. REMOVE SEAT CUSHION ASSEMBLY

- (a) Pull up the front portion of the seat cushion assembly.
- (b) Through the rear seat inner belts to remove the seat cushion assembly.
- (c) Remove the seat cushion assembly.

2. REMOVE SEATBACK ASSEMBLY

Remove the 3 bolts and seatback assembly.