



DISASSEMBLY

1. REMOVE SEATBACK FRAME

- (a) Remove the 5 clips.
- (b) Remove the seatback lock knob.

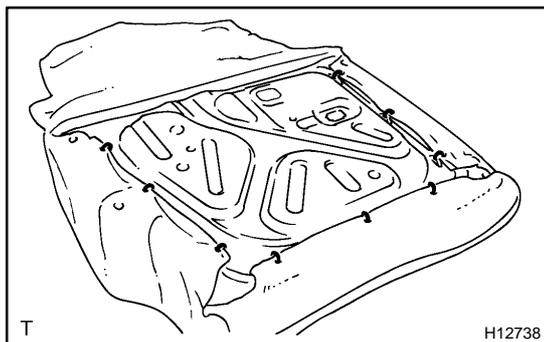

- (c) Remove the hog rings.
- (d) Remove the seatback lock knob holder and 2 headrest supports.
- (e) Remove the seatback frame from seatback cover with pad.
- (f) Use the same manner described above to the other side.

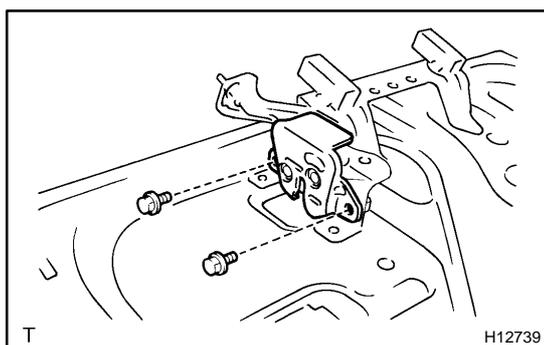

2. REMOVE SEATBACK LOCK

- (a) Remove the 2 bolts and seatback lock from the seatback frame.
- (b) Use the same manner described above to the other side.