


## INSTALLATION

### 1. INSTALL REAR SEAT CUSHION CENTER BRACKET

Install the rear seat cushion center bracket with the bolt.


**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**

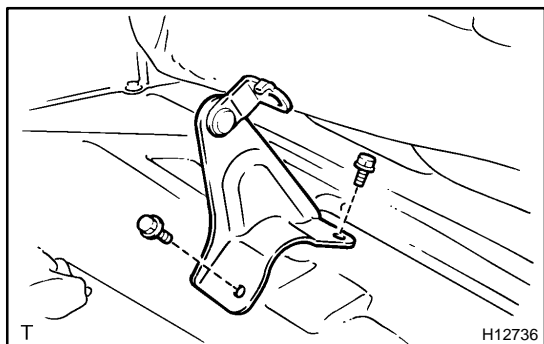

### 2. INSTALL CENTER HINGE

Install the center hinge to the body with the 2 bolts.

**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**

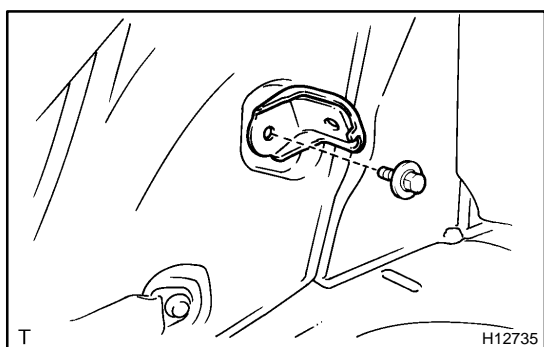


### 3. INSTALL REAR SEAT SIDE HINGE

(a) Install the rear seat side hinge with the bolt.

**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**

(b) Use the same manner described above to the other side.

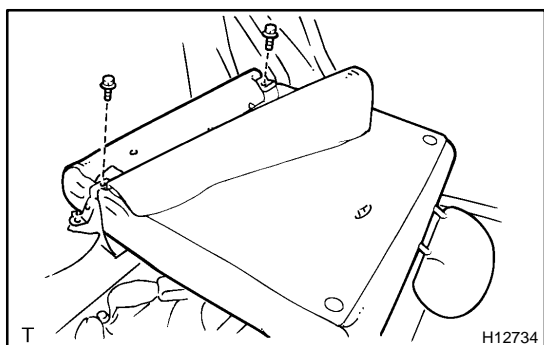


### 4. INSTALL SEATBACK ASSEMBLY

(a) Install the seatback assembly with the 2 bolts.

**Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)**

(b) Use the same manner described above to the other side.

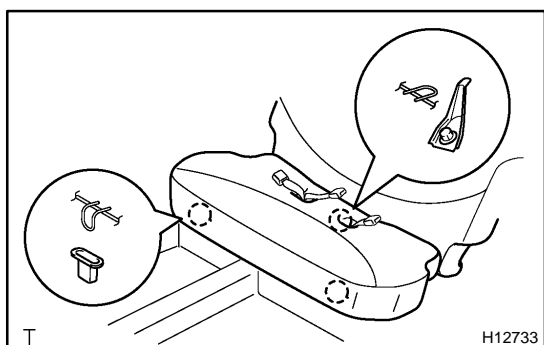

### 5. INSTALL SEAT CUSHION ASSEMBLY

(a) Hook the seat cushion wire to the rear seat cushion center bracket.

(b) Push the front portion of seat cushion assembly to install it.

**HINT:**

Confirm that the seat cushion assembly is installed firmly.