


## REMOVAL


### 1. REMOVE SEAT CUSHION ASSEMBLY

- (a) pull up the front portion of the seat cushion.
- (b) Through the rear seat inner belts to remove the seat cushion assembly.
- (c) Release the seat cushion wire from center bracket and remove the seat cushion assembly.

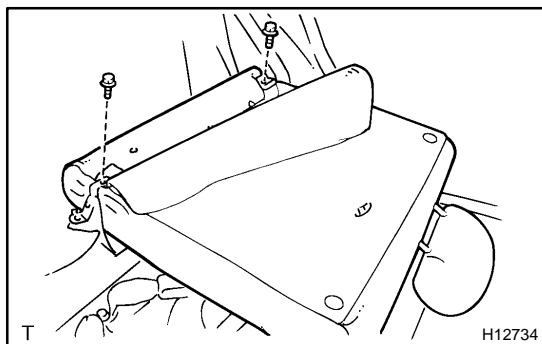


### 2. REMOVE SEATBACK ASSEMBLY

- (a) Remove the 2 clips.
- (b) Remove the 2 bolts and seatback assembly.
- (c) Use the same manner described above to the other side.

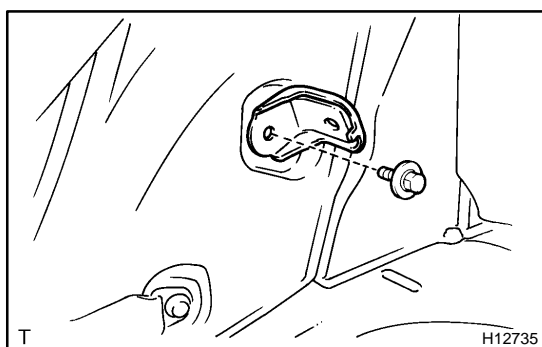

### 3. REMOVE REAR SEAT SIDE HINGE

- (a) Remove the bolt and rear seat side hinge.
- (b) Use the same manner described above to the other side.

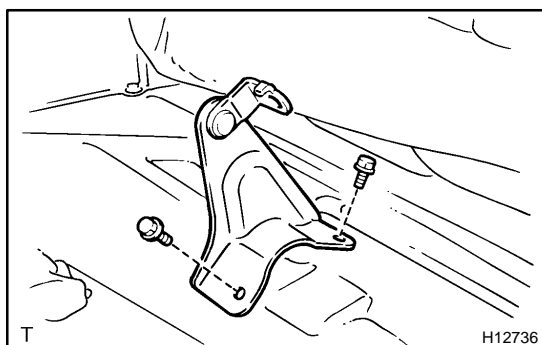

### 4. REMOVE CENTER HINGE

Remove the 2 bolts and center hinge from the body.

### 5. REMOVE REAR SEAT CUSHION CENTER BRACKET

Remove the bolt and rear seat cushion center bracket.