


REMOVAL

1. **DISCONNECT CONNECTOR FROM ABS ACTUATOR ASSEMBLY**
2. **REMOVE BATTERY**
3. **REMOVE NUTS OF ENGINE ROOM RELAY BLOCK NO. 2, AND MOVE ENGINE ROOM RELAY BLOCK NO. 2 ASIDE**

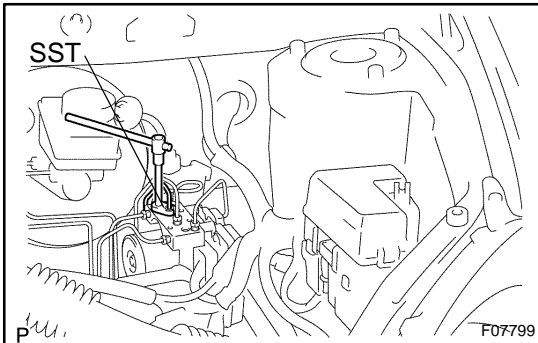

4. **DISCONNECT BRAKE LINES**

Using SST, disconnect the 6 brake lines from the ABS actuator assembly.

SST 09023-00100

Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)

5. **REMOVE ABS ACTUATOR ASSEMBLY**

Remove the 3 bolts and ABS actuator assembly.

Torque: 19 N·m (195 kgf-cm, 14 ft-lbf)

6. **REMOVE ABS ACTUATOR**

(a) Remove the 3 nuts and ABS actuator from the actuator bracket.

Torque: 4.7 N·m (48 kgf-cm, 42 in.-lbf)

(b) Remove the 3 holders from the ABS actuator.

7. **REMOVE BOLT AND CLAMP FROM ABS ACTUATOR**

Torque: 19 N·m (195 kgf-cm, 14 ft-lbf)