

REMOVAL

1. DISCONNECT SPEED SENSOR CONNECTOR

Disconnect the speed sensor connector.

2. REMOVE FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

3. REMOVE SPEED SENSOR

- (a) Remove the 2 clamp bolts and a clip holding the sensor harness to the body and shock absorber.


Torque:

Harness clamp x Body:

8.0 N·m (82 kgf·cm, 71 in·lbf)

Harness clamp x Shock absorber:

29.0 N·m (300 kgf·cm, 22 ft·lbf)

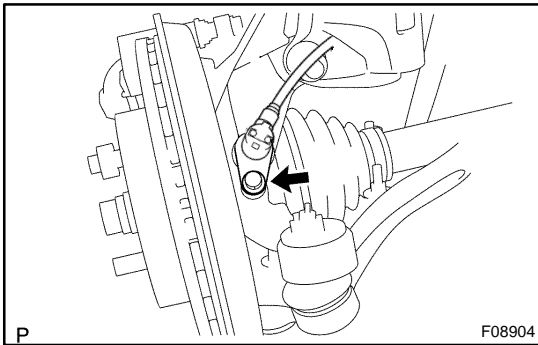

- (b) Remove the bolt and speed sensor from the steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)