

## INSTALLATION


Installation is in the reverse order of removal (See page [BR-28](#)).

### NOTICE:

Apply lithium soap base glycol grease and high temperature grease to the parts indicated by the arrows (See page [BR-27](#)).

### 1. CHECK OPERATION OF AUTOMATIC ADJUSTING MECHANISM

- (a) Narrow the brake shoe width to the most and install the brake drum.
- (b) Depress the brake pedal several times.

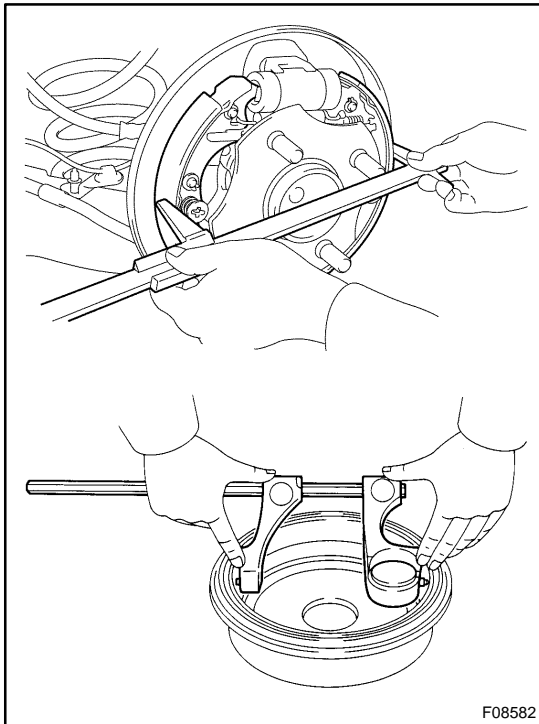

F08582

### 2. CHECK CLEARANCE BETWEEN BRAKE SHOES AND DRUM

- (a) Remove the brake drum.
- (b) Measure the brake drum inside diameter and diameter of the brake shoes. Check that the difference between the diameters is the correct shoe clearance.

**Shoe clearance: 0.6 mm (0.024 in.)**

If incorrect, check the adjusting lever and adjusting latch.

- (c) Install the brake drum.

### 3. FILL BRAKE RESERVOIR WITH BRAKE FLUID

### 4. BLEED BRAKE SYSTEM (See page [BR-4](#))

### 5. CHECK FOR LEAKS

### 6. INSTALL REAR WHEEL

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**