



## INSTALLATION

### INSTALL GENERATOR

- (a) Install the generator and temporarily tighten the 2 bolts.
- (b) Install the drive belt and adjust the belt tension (See page [CH-2](#)).
- (c) Tighten the 2 bolts.

#### Torque:

**14 mm head 18 N·m (185 kgf-cm, 14 ft-lbf)**

**17 mm head 54 N·m (550 kgf-cm, 40 ft-lbf)**

- (d) Connect the generator connector.
- (e) Connect the harness clamp.
- (f) Connect the generator wire, and install the nut and rubber cap.
- (g) Connect the generator wire, and install the rubber cap and nut.