


REMOVAL

REMOVE GENERATOR

- (a) Disconnect the wire clamp from the wire clip on the rectifier end frame.
- (b) Remove the rubber cap and nut, and disconnect the generator wire.
- (c) Disconnect the generator connector.
- (d) Disconnect the harness clamp from the generator.

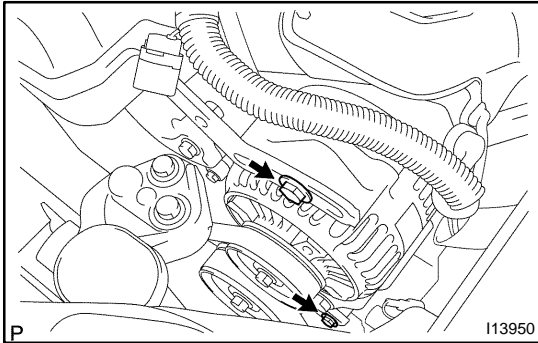

- (e) Loosen the 2 bolts and remove the drive belt.
- (f) Remove the 2 bolts and generator.