


REMOVAL

1. **DRAIN ENGINE COOLANT**
2. **REMOVE ENGINE UNDER COVERS**
3. **REMOVE RADIATOR ASSEMBLY**
 - (a) Disconnect the electric cooling fan connector.
 - (b) Disconnect the horn connector.
 - (c) Disconnect the upper radiator hose.
 - (d) Disconnect the lower radiator hose.
 - (e) Disconnect the radiator reservoir hose.
 - (f) A/T:
Disconnect the 2 oil cooler hoses.
 - (g) Remove the 2 clips and radiator cover.

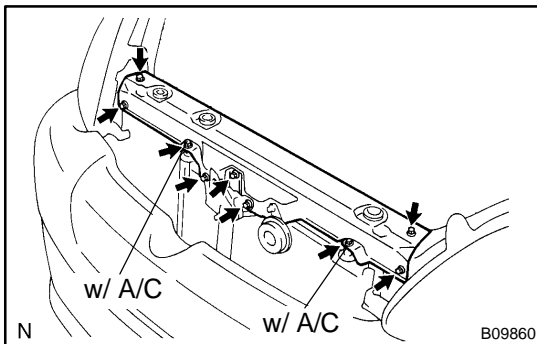

- (h) Remove the 7 (w/o A/C) or 9 (w/ A/C) bolts and upper radiator supports.
- (i) Remove the radiator assembly.
- (j) Remove the 2 radiator support cushions and grommets.
4. **REMOVE ELECTRIC COOLING FAN FROM RADIATOR**

Remove the 3 bolts and cooling fan assembly.