


REMOVAL

HINT:

Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.

1. DRAIN ENGINE COOLANT

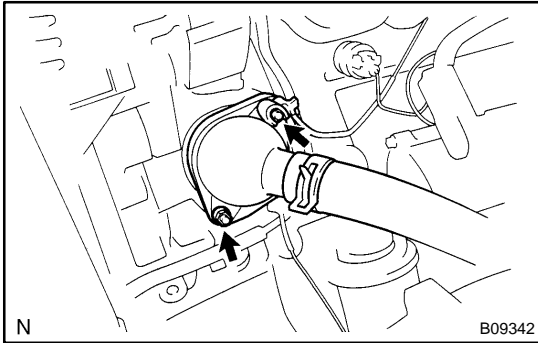

2. REMOVE WATER INLET AND THERMOSTAT

- (a) Disconnect the wire harness clamp from the water inlet.
- (b) Remove the 2 nuts, and disconnect the water inlet from the cylinder block.
- (c) Remove the thermostat.
- (d) Remove the gasket from the thermostat.