



## REMOVAL

1. DRAIN ENGINE COOLANT
2. REMOVE DRIVE BELT (See page [CH-2](#))

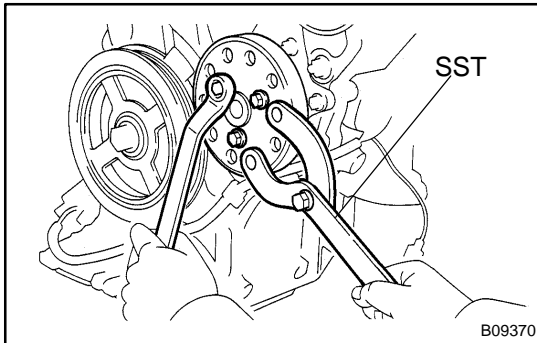

### 3. REMOVE WATER PUMP

- (a) Using SST, remove the 3 bolts and pump pulley.  
SST 09960-10010 (09962-01000, 09963-00600)

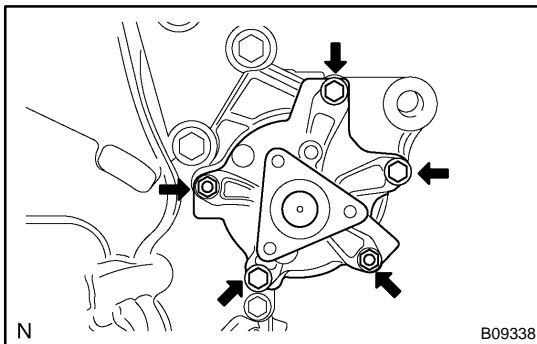

- (b) Remove the 3 bolts, 2 nuts, water pump and gasket.