

DTC	C0226 / 21 to C0256 / 24	ABS Solenoid Valve Circuit
------------	---------------------------------	-----------------------------------

CIRCUIT DESCRIPTION


This solenoid goes on when signals are received from the ECU and controls the pressure acting on the wheel cylinders thus controlling the braking force.

DTC No.	DTC Detecting Condition	Trouble Area
C0226 / 21 C0236 / 22 C0246 / 23 C0256 / 24	With IG1 terminal voltage at 8.5 V - 19 V, solenoid circuit is open or short for 0.05 sec. or longer.	<ul style="list-style-type: none"> • Each solenoid valves circuit • ABS actuator

HINT:

- DTC No. C0226 / 21 is for right front solenoid valve.
- DTC No. C0236 / 22 is for left front solenoid valve.
- DTC No. C0246 / 23 is for right rear solenoid valve.
- DTC No. C0256 / 24 is for left rear solenoid valve.

WIRING DIAGRAM

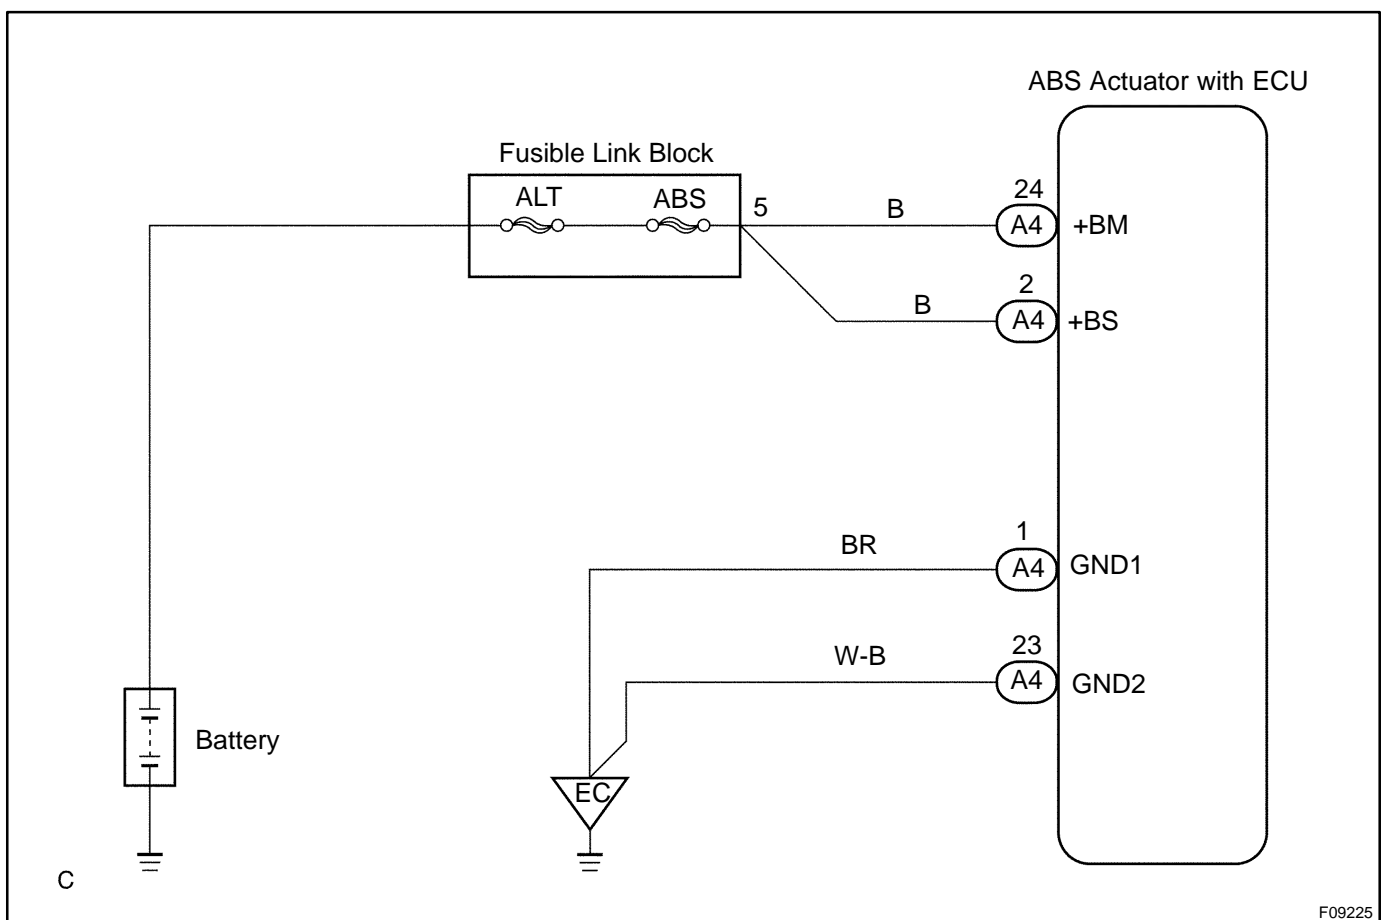

F09225

INSPECTION PROCEDURE

1	Check the DTC once more.
----------	---------------------------------

PREPARATION:

- (a) Clear the DTC (See page [DI-201](#)).
- (b) Turn the ignition switch OFF.

CHECK:

Turn the ignition switch ON, and check that the same DTC is stored in the memory.

