DI6UJ-01

DTC	P1520	Stop Light Switch Signal Malfunction	5,003-01
-----	-------	--------------------------------------	----------

## **CIRCUIT DESCRIPTION**

The purpose of this circuit is to prevent the engine from stalling, while driving in lock-up condition, when brakes are suddenly applied.

When the brake pedal is operated, this switch sends a signals to ECM. Then the ECM cancels operation of the lock-up clutch while braking is in progress.

DTC No.	DTC Detecting Condition	Trouble Area
P1520	No stop light switch signal to ECM during driving. (2-trip detection logic)	Open or short in stop light switch circuit Stop light switch ECM

## **WIRING DIAGRAM**

See page DI-129.

## **INSPECTION PROCEDURE**

See page DI-129.

2002 ECHO (RM884U)

Author: Date: 353