


IGNITION TIMING INSPECTION

EM16A-01

1. WARM UP ENGINE


Allow the engine to warm up to normal operating temperature.

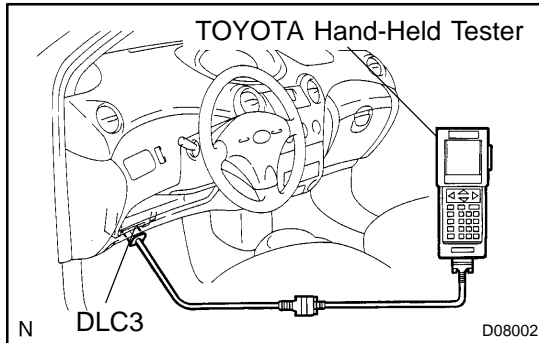

2. CONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL

- (a) Connect the TOYOTA hand-held tester or OBDII scan tool to the DLC3.
- (b) Please refer to the TOYOTA hand-held tester or OBDII scan tool operator's for further details.

3. CONNECT TIMING LIGHT TO ENGINE

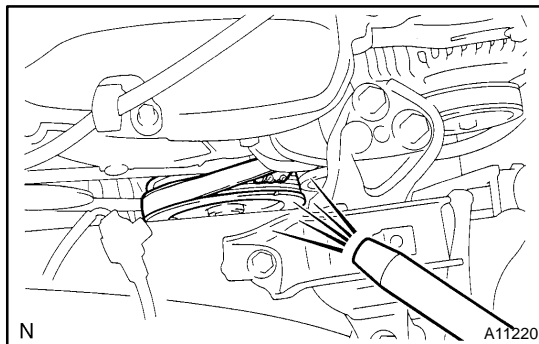

Using a timing light, check the ignition timing.

Ignition timing: 8 - 12° BTDC @ idle
(Transmission in neutral position)

4. DISCONNECT TIMING LIGHT FROM ENGINE
5. DISCONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL