



REMOVAL

REMOVE CAMSHAFT POSITION SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and camshaft position sensor.

Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)