


REMOVAL

1. REMOVE NO. 2 CYLINDER HEAD COVER

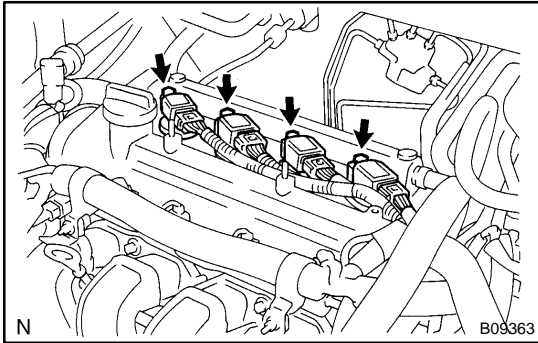

2. DISCONNECT 4 IGNITION COIL CONNECTORS
3. REMOVE IGNITION COILS (WITH IGNITER) FROM SPARK PLUGS

Remove the 4 bolts and pull out the 4 ignition coils (with igniter).

Torque: 9.0 N·m (92 kgf·cm, 80 in.-lbf)