

## REASSEMBLY

### INSTALL RELIEF VALVE

Insert the relief valve and spring into the pump body hole, and install the plug.

**Torque: 24 N·m (245 kgf·cm, 18 ft·lbf)**