 
 
 



 

 

 
 
 
 

 



 


 



MANUAL TRANSAXLE

SST (Special Service Tools)

PP2EN-01

	09308-00010 Oil Seal Puller	Output shaft front bearing
	09309-12020 5th Driven Gear Replacer	
	09350-32014 TOYOTA Automatic Transmission Tool Set	
	(09351-32090) Oil Seal Remover & Replacer	Differential side bearing
	(09351-32111) Side Bearing Race Replacer	Differential side bearing oil seal (Transmission case side)
	(09351-32120) Overdrive Bearing Replacer	Differential side bearing
	(09351-32130) Handle	
	(09351-32150) Oil Seal Replacer	Differential side bearing oil seal (Transaxle case side)
	09564-32011 Differential Preload Adaptor	
	09608-00071 Drive Pinion Rear Bearing Cone Replacer	Input shaft rear ball bearing 4th driven gear and rear ball bearing
	09612-22011 Tilt Handle Bearing Replacer	No. 3 hub sleeve assembly
	09612-65014 Steering Worm Bearing Puller	Input shaft front bearing Input shaft front oil seal Differential side bearing oute race

	<p>09950-00020 Bearing Remover</p>	
	<p>09950-00030 Bearing Remover Attachment</p>	
	<p>09950-4001 1 Puller B Set</p>	
	<p>09950-60010 Replacer Set</p>	
	<p>(09951-00360) Replacer 36</p>	<p>Input shaft front oil seal Differential side bearing</p>
	<p>(09951-00460) Replacer 46</p>	<p>Input shaft front bearing</p>
	<p>(09951-00620) Replacer 62</p>	<p>Output shaft front bearing</p>
	<p>09950-60020 Replacer Set No.2</p>	
	<p>(09951-00680) Replacer 68</p>	<p>Differential side bearing outer race (Transaxle case side)</p>
	<p>(09951-00710) Replacer 71</p>	<p>Differential side bearing outer race (Transmission case side)</p>
	<p>09950-70010 Handle Set</p>	
	<p>(09951-07150) Handle 150</p>	