


REMOVAL

NOTICE:

Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

1. REMOVE PANEL

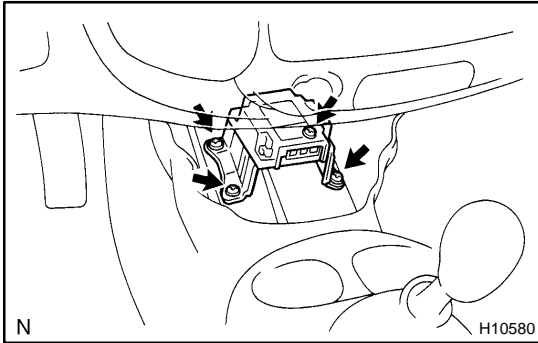

2. REMOVE AIRBAG SENSOR ASSEMBLY

(a) Disconnect the airbag sensor assembly connectors.

NOTICE:

Disconnect the connectors with the sensor assembly installed.

(b) Using a torx wrench, remove the 4 screws and airbag sensor assembly.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)