

## REPLACEMENT

### REPLACEMENT REQUIREMENTS

In the following cases, replace the front airbag sensor.

- If the door side airbag sensor has been deployed in a collision.
- If the door side airbag sensor has been found to be faulty in troubleshooting.
- If the door side airbag sensor has been found to be faulty during checking items.  
(See page [RS-58](#))
- If the door side airbag sensor has been dropped.

### CAUTION:

For removal and installation of the door side airbag sensor, see page [RS-73](#) and [RS-76](#) . Be sure to follow the correct procedure.