

## REPLACEMENT

### REPLACEMENT REQUIREMENTS

In the following cases, replace the front passenger airbag assembly, instrument panel or instrument panel reinforcement.

Case	Replacing part
If the airbag has been deployed.	Front passenger airbag assembly
If the front passenger airbag assembly has been found to be faulty in troubleshooting.	Front passenger airbag assembly
If the front passenger airbag assembly has been found to be faulty during checking items. (See page <a href="#">RS-29</a> )	Front passenger airbag assembly
If the instrument panel has been found to be faulty during checking items. (See page <a href="#">RS-29</a> )	Instrument panel
If the instrument panel reinforcement has been found to be faulty during checking items. (See page <a href="#">RS-29</a> )	Instrument panel reinforcement
If the front passenger airbag assembly has been dropped.	Front passenger airbag assembly

### CAUTION:

For replacement of the front passenger airbag assembly, see page [RS-28](#) and [RS-37](#) . Be sure to follow the correct procedure.