

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the seatback assembly or seat cover.

- If the side airbag assembly has been deployed.
- If the side airbag assembly has been found to be faulty in troubleshooting.
- If the side airbag assembly or seatback cover has cuts and frayed seams during checking item.
(See page [RS-41](#))
- If the side airbag assembly or seatback cover has been found to be faulty during checking item.
(See page [RS-41](#))
- If the seatback assembly has been dropped.

CAUTION:

For removal and installation on the seatback assembly, see page [RS-39](#) and [RS-49](#) . Be sure to follow the correct procedure.