

REMOVAL

NOTICE:


Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

HINT:

For step 1 to 3, refer to page [BO-1 10](#).

1. REMOVE FRONT AND REAR DOOR SCUFF PLATES
2. REMOVE CENTER PILLAR LOWER GARNISH
3. REMOVE RETRACTOR PART OF FRONT SEAT OUTER BELT

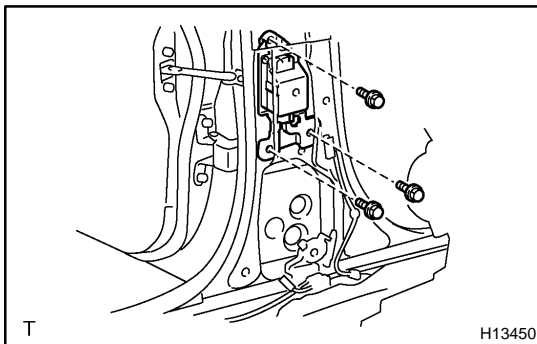

4. REMOVE SIDE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the side airbag sensor assembly connector.

NOTICE:

Disconnect the connector with the sensor assembly installed.

- (b) Remove the 3 bolts and side airbag sensor assembly.