



## REMOVAL


1. **REMOVE REAR WHEELS**
2. **REMOVE PACKAGE TRAY TRIM**
  - (a) Remove the high-mounted stop light.
  - (b) Remove the 2 clips and package tray trim.
3. **REMOVE REAR SEAT**
  - (a) Remove the rear seat cushion and seatback  
(See page [BO-101](#) or [BO-106](#) ).
  - (b) Split type rear seat:  
Remove the 2 bolts and seatback side hinge.
4. **REMOVE DOOR SCUFF PLATE AND DOOR OPENING TRIM**
5. **REMOVE QUARTER TRIM**
  - (a) Remove the bolt and rear seat outer belt.
  - (b) Remove the quarter trim.
6. **REMOVE ROOF SIDE INNER GARNISH**
  - (a) 2-Door model:  
Remove the bolt and disconnect the front seat outer belt shoulder anchor.
  - (b) Remove the roof side inner garnish.
7. **REMOVE ROOM PARTITION BOARD**

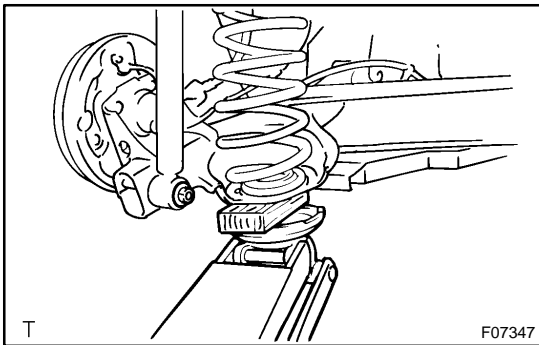

8. **SUPPORT REAR AXLE BEAM AT RIGHT AND LEFT SIDES WITH JACKS**

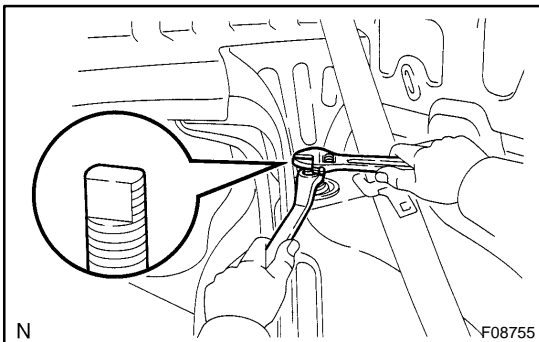

9. **REMOVE SHOCK ABSORBER**
  - (a) While holding the piston rod, remove the 2 nuts.
  - (b) Remove the washer and upper suspension support.

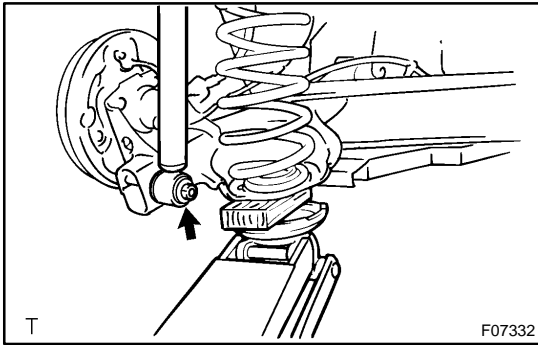

(c) Remove the nut, washer and shock absorber.

(d) Remove the lower suspension support.

**10. REMOVE COIL SPRING**

(a) Remove the opposite shock absorber lower side set nut and washer, and disconnect the shock absorber from the axle beam.

(b) Lower the jacks gradually.

(c) Remove the coil spring, upper and lower insulators.