

DISASSEMBLY


REMOVE COIL SPRING

- (a) Install 2 nuts and a bolt to the bracket at the lower side of the shock absorber and secure it in a vise.
- (b) Using SST, compress the coil spring.
SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

NOTICE:

Do not use an impact wrench. It will damage the SST.

- (c) Remove the cap from the suspension support.

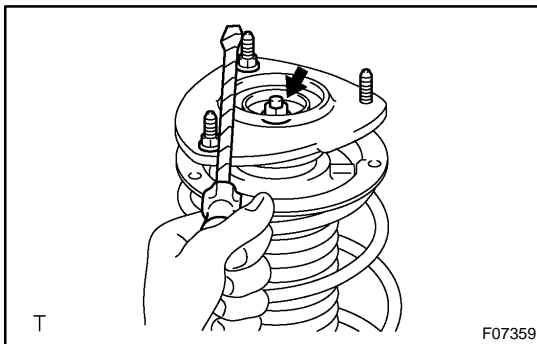

- (d) Using 2 nuts and a screwdriver or an equivalent to hold, remove the center nut.

NOTICE:

Do not damage the suspension support stud bolts.

- (e) Remove the suspension support, dust seal, spring upper seat, upper insulator, spring bumper and coil spring.