



## INSPECTION

### INSPECT SHOCK ABSORBER

Compress and extend the shock absorber rod and check that there is no abnormal resistance or unusual sound during operation.

If there is any abnormality, replace the shock absorber with a new one.

### NOTICE:

**When disposing of the shock absorber, see DISPOSAL on page SA-29 .**