



REMOVAL

1. REMOVE REAR WHEELS

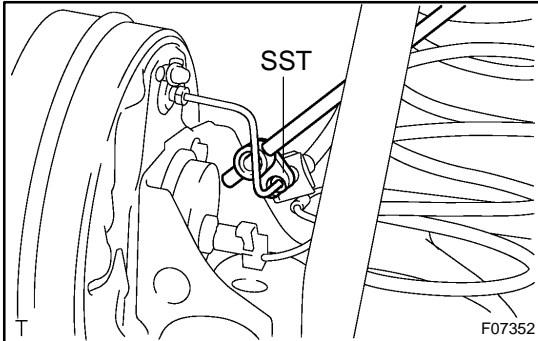

2. DISCONNECT BRAKE LINES

- (a) Using SST, disconnect the brake lines from the flexible hose. Use a container to catch brake fluid as it drains out.
SST 09023-00100
- (b) Remove the clip.
- (c) Employ the same manner described above to the other side.

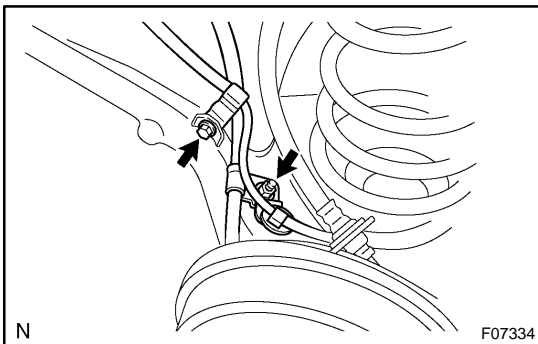

3. DISCONNECT ABS SPEED SENSOR WIRE HARNESS AND PARKING BRAKE CABLE CLAMPS

- (a) Remove the bolt and nut, and disconnect the ABS speed sensor wire harness and parking brake cable clamps from the axle beam.
- (b) Employ the same manner described above to the other side.

4. REMOVE AXLE HUB ASSEMBLES (See page [SA-42](#))

5. REMOVE REAR COIL SPRINGS (See page [SA-49](#))

6. REMOVE REAR AXLE BEAM

Remove the 2 bolts and rear axle beam.

