

INSTALLATION

1. INSTALL AXLE HUB ASSEMBLY

Install the axle hub assembly with the 4 bolts.

Torque: 52 N·m (526 kgf·cm, 38 ft·lbf)

2. w/ ABS:

CONNECT ABS SPEED SENSOR CONNECTOR TO AXLE HUB ASSEMBLY

3. CHECK BEARING BACKLASH AND AXLE HUB DEVIATION (See page [SA-42](#))

4. INSTALL BRAKE DRUM

5. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

6. w/ ABS:

CHECK ABS SPEED SENSOR SIGNAL (See page [DI-201](#))