


# REAR WHEEL HUB BOLT REPLACEMENT

SA0DB-04


1. REMOVE REAR WHEEL
2. REMOVE BRAKE DRUM

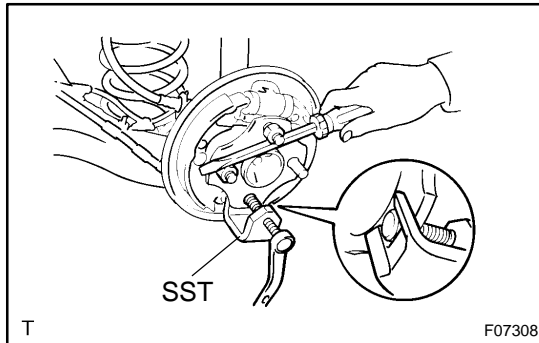

### 3. REMOVE HUB BOLT

Using SST, 2 nuts and a screwdriver or an equivalent, remove the hub bolt.

SST 09628-1001 1

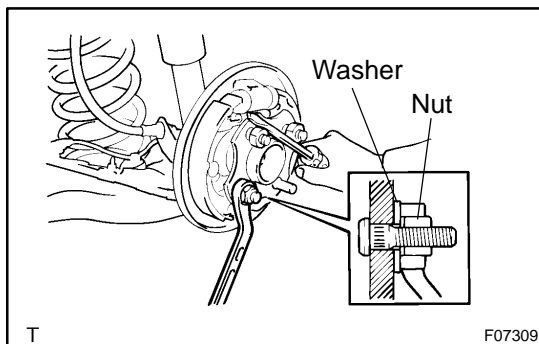

### 4. INSTALL HUB BOLT

- (a) Install a washer and nut to a new hub bolt as shown in the illustration.
- (b) Using a screwdriver or an equivalent to hold, install the hub bolt by torquing the nut.
- (c) Remove the 3 nuts and washer.

### 5. INSTALL BRAKE DRUM

### 6. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)