

## INSPECTION

### 1. REMOVE ECM

- (a) Remove the glove compartment door (See page [BO-76](#) ).
- (b) Remove the connector cover.
- (c) Remove the 2 screws and ECM.
- (d) Disconnect the ECM connectors.

### 2. INSPECT ECM (See page [DI-19](#) )

### 3. REINSTALL ECM

- (a) Connect the 3 ECM connectors.
- (b) Install the ECM with the 2 screws.
- (c) Install the connector cover.
- (d) Install the glove compartment door (See page [BO-84](#) ).