


## INSPECTION

1. DRAIN ENGINE COOLANT
2. REMOVE NO.2 CYLINDER HEAD COVER
3. REMOVE AIR CLEANER ASSEMBLY (See page [EM-53](#))
4. REMOVE ECT SENSOR

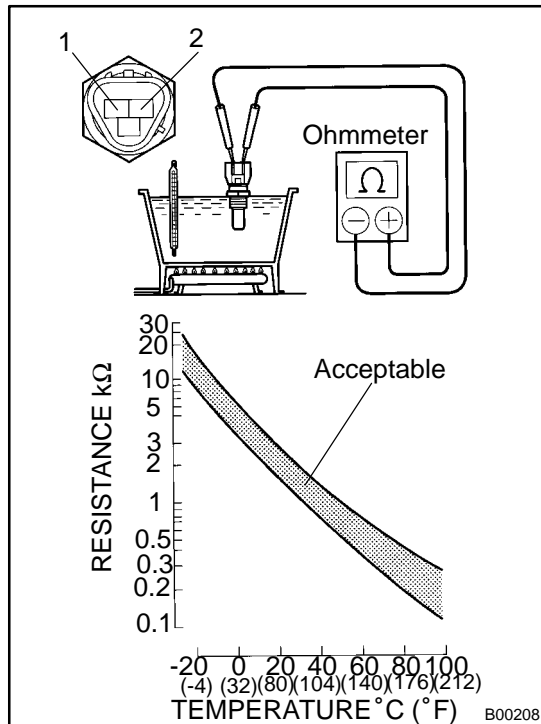

### 5. INSPECT ECT SENSOR RESISTANCE

Using an ohmmeter, measure the resistance between terminals 1 (E2) and 2 (THW).

**Resistance:**

**Refer to the graph**

If the resistance is not as specified, replace the ECT sensor.

### 6. REINSTALL ECT SENSOR

Install a new gasket to the ECT sensor.

### 7. REINSTALL NO.2 CYLINDER HEAD COVER

### 8. REINSTALL AIR CLEANER ASSEMBLY

### 9. FILL RADIATOR WITH ENGINE COOLANT