


IDLE AIR CONTROL (IAC) VALVE ON-VEHICLE INSPECTION

SF09U-04

INSPECT IAC VALVE OPERATION

- (a) Initial conditions:
- Engine at normal operating temperature
 - Idle speed set correctly
 - Transmission in neutral
 - A/C switch OFF

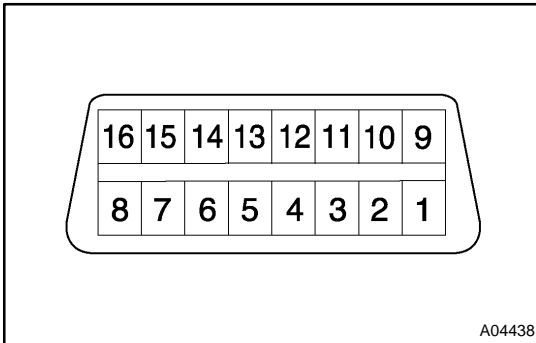

- (b) Using SST, connect terminals TC and CG of the DLC3.
SST 09843-18020
- (c) After engine speed are kept at 900 - 1,300 rpm for 5 seconds, check that they return to idle speed.

If the rpm operation is not as specified, check the IAC valve, wiring and ECM.

- (d) Remove the SST from the DLC3.
SST 09843-18020