



INSPECTION

NOTICE:

When using a vise, do not overtighten it.

INSPECT STEERING RACK

- (a) Using a dial indicator, check the rack for runout, teeth wear and damage.

Maximum runout: 0.15 mm (0.0059 in.)

- (b) Check the back surface for wear and damage.