



INSTALLATION

1. INSTALL STARTER

- (a) Install the 2 bolts and starter.
- (b) Connect the starter wire, and install the nut.
- (c) Connect the starter connector.

2. INSTALL RH AND LH ENGINE UNDER COVER