



REMOVAL

1. REMOVE RH AND LH ENGINE UNDER COVER
2. REMOVE STARTER
 - (a) Disconnect the starter connector.
 - (b) Remove the nut, and disconnect the starter wire.
 - (c) Remove the 2 bolts and starter.