


STARTER RELAY INSPECTION

ST02U-02

1. REMOVE STARTER RELAY
2. INSPECT STARTER RELAY CONTINUITY
 - (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
 - (b) Check that there is no continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

If there is continuity, replace the relay.

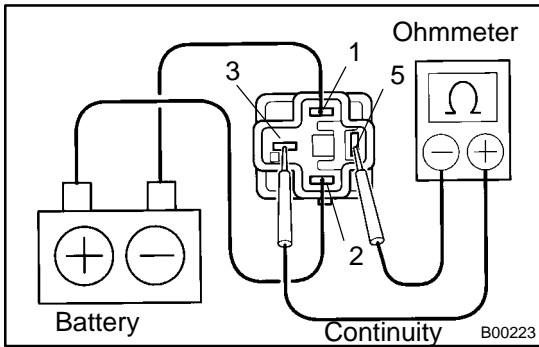

3. INSPECT STARTER RELAY OPERATION
 - (a) Apply battery positive voltage across terminals 1 and 2.
 - (b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
4. REINSTALL STARTER RELAY

If there is continuity, replace the relay.