


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/ REARWARD AND VERTICAL DIRECTIONS


- Remove the front and rear door scuff plates.
- Remove the center pillar lower garnish.
- Remove the front seat outer belt (See page [BO-1 10](#)).
- Loosen the body side hinge nuts to adjust.
Torque: 25 N·m (260 kgf-cm, 19 ft-lbf)
- Install the front seat outer belt and center pillar lower garnish (See page [BO-1 10](#)).
- Install the front and rear door scuff plates.

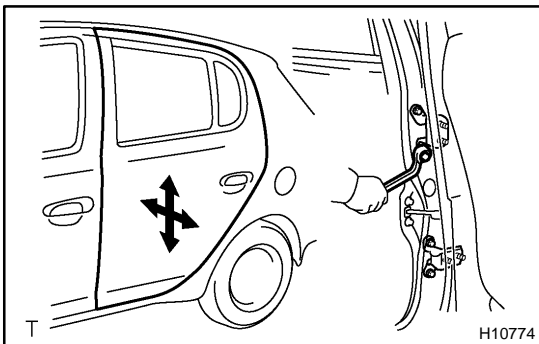

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

Torque: 25 N·m (260 kgf-cm, 19 ft-lbf)

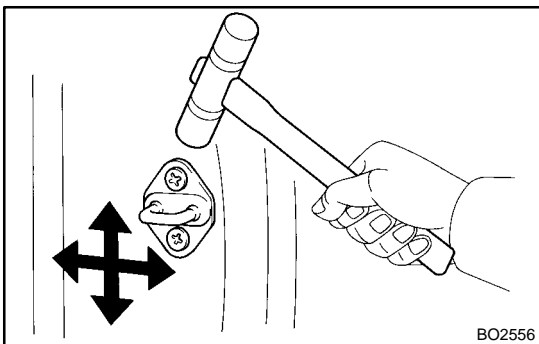

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Loosen the striker mounting screws to adjust.
Torque: 23 N·m (230 kgf-cm, 17 ft-lbf)
- Using a plastic hammer, tap the striker to adjust it.